



---WHITE LED MIRROR MOD KIT v2.0---


This kit is designed to allow the use of the factory white led spot lights on the 2015 and newer F-150 trucks as well as the 2017 and newer Superduty trucks to be used as strobe lights and still retain their oem spot functions also. Speed does NOT affect the strobes they stay on over 5 mph. You will know your truck has these lights by the switches under the LH AC vent left of steering.

Please watch the YOU-TUBE video installation to help you better understand the way this kit installs. You will be cutting the OEM mirror wires labeled #1 and #2 in the picture below in GREEN OEM connector and attaching those to the wicked module separating the factory circuit and allowing the strobe. LEAVE ENOUGH WIRE TO ATTACH WICKED KIT to OEM wires.

Below you will see a picture showing which wires on the OEM module to cut, the module that is located under the steering wheel on the RH side behind the steel crash pad. There is also a picture of the Wicked Mirror Module with connections labeled below. Be sure to cut the wires at least 3" away from the GREEN CONNECTOR to allow you room to connect the short wires on connector to the wicked kit wires. Fuse the module through your own switch of choice at 5 amps total. VERIFY WITH A TEST LIGHT THESE WIRES GET POSITIVE WHEN MIRROR LIGHTS SWITCH IS ON, if you do not verify I cannot assist with a troubled installation.



We will refer to this wire as OEM wire #2 with a "FROM GREEN CONNECTOR" and a "INTO DASHBOARD" label for the ends of the wire once you cut it.

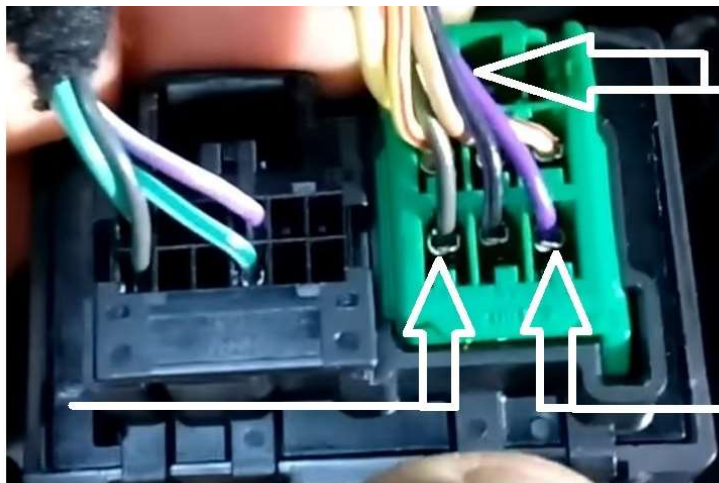

Be sure to cut 3" up so you have enough wire left coming out of GREEN CONNECTOR to attach to Wicked Kit wires.



We will refer to this as OEM wire #1 with a "FROM GREEN CONNECTOR" and a "INTO DASHBOARD" label for the 2 ends of the wire once you cut it.

